
 
 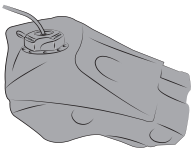








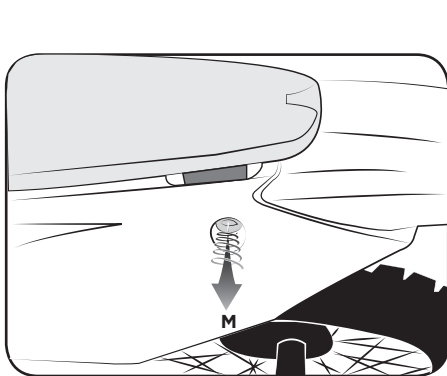
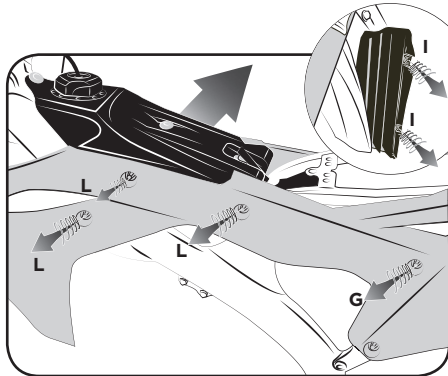


COD. 5000005628


ACERBIS PARTS				O.E.M ITEMS TO USE:			
							
A - (1 pcs.)	B - (2 pcs.)	C - (2 pcs.)	D - (1 pcs.)	M - (2 pcs.)	L - (6 pcs.)	I - (4 pcs.)	F - (1 pcs.)
							
				E - (1 pcs.)	H - (1 pcs.)	G - (2 pcs.)	

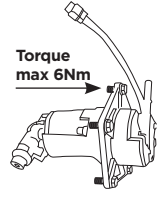


1. Rimuovere le due viti sella.
Remove the two saddle screws.




2. Rimuovere le viti laterali dei fianchetti e le due viti anteriori all'altezza dei radiatori.
Remove the lateral screws of the side panels and the two front screws at the radiator height.

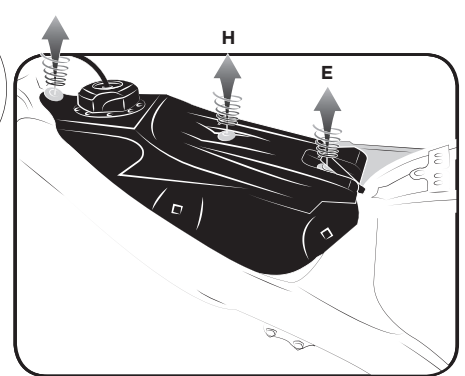


3. Sganciare l'elastico e rimuovere le tre viti serbatoio.
Unfasten the elastic and remove the three tank screws.

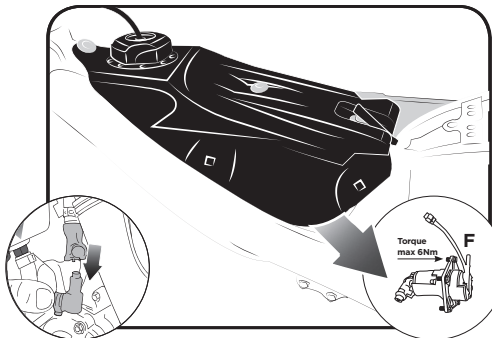


4. Svuotare il serbatoio da benzina, scollegare le utenze e rimuovere la pompa.
Empty the petrol from the tank, disconnect the systems and remove the pump.

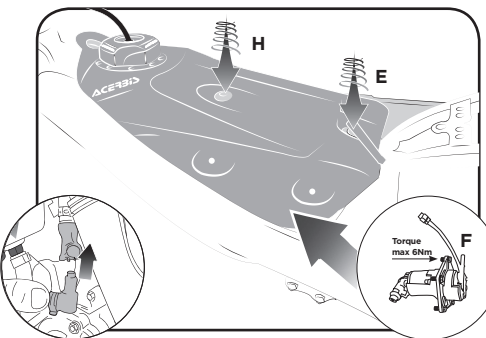


5. Montare serbatoio Acerbis, la pompa e collegare le utenze. Avvitare le due viti serbatoio.
Install the Acerbis tank, the pump and attach the systems. Tighten the two tank screws.

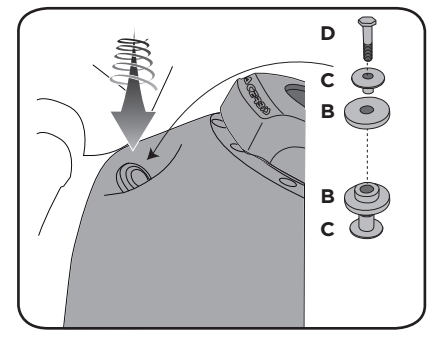

6. Avvitare la vite anteriore del serbatoio e fissare l'elastico.
Tighten the front screw of the tank and fasten the elastic.

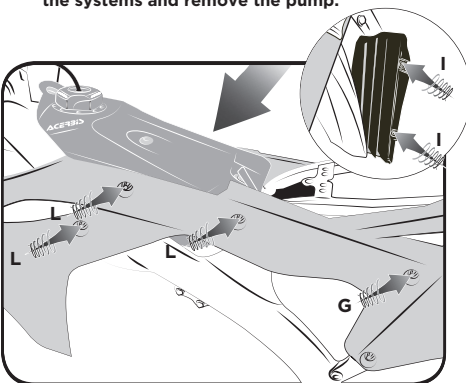

7. Avvitare le viti laterali dei fianchetti e le due viti anteriori all'altezza dei radiatori.
Tighten the side screws of the side panels and the two front screws at the height of the radiators.

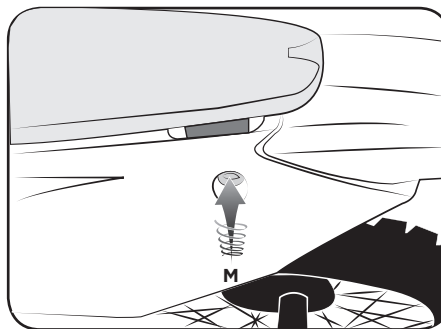

8. Riavvitare le due viti sella.
Tighten the two saddle screws.

ACERBIS®

Thank you for purchasing an ACERBIS fuel tank

WARNING

It is **EXTREMELY IMPORTANT** that the fuel tank be properly installed. To ensure proper installation, it is **STRONGLY RECOMMENDED** that the tank be installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injury or even death.

If self-installed NOTE THE FOLLOWING. Particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instruction first before beginning installation.

DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotationally molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.